



## ***Periodic inspection of integral particulate and debris strainer.***

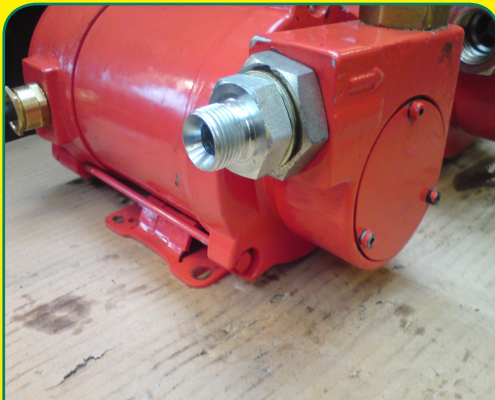

Remove pump inlet hose & unscrew integral filter housing noting position of seal and orientation of bypass valve spring.

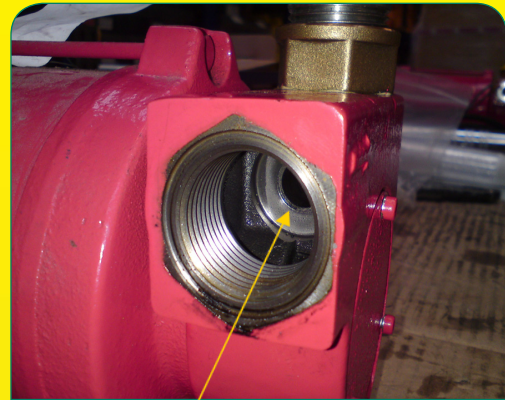

Bypass valve



When removing this assembly be aware of any debris build up as shown above. It will only take a small amount of this debris to permanently damage the vanes in the pump. Re-fitting is the reverse of removal.



Included in service kit; Pump body cap seal, strainer body seal, mesh strainer, bypass valve assembly, set of five vanes.



**For more information, call 0113 2059332 or email [info@autodrain.net](mailto:info@autodrain.net)**