

How to clean AutoShear spool valve

Remove spool valve from power pack noting orientation and location of O rings



Disassemble and clean thoroughly with compressed air taking note of the shuttle, springs, washers & O rings



Re-fitting is the reversal of removal