

Periodic inspection and cleaning of digital flow meter




Over time fine metallic swarf could build up causing the flow meter to malfunction.



To resolve this issue, remove the rear panel of the meter by unscrewing the four allen cap screws.



Check oval gears & seal for damage. Noting orientation of gears and position of magnets, remove the gears for cleaning.

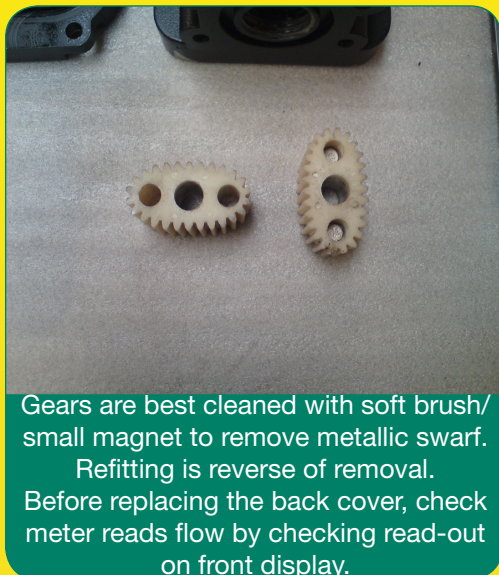

Gears are best cleaned with soft brush/ small magnet to remove metallic swarf.
Refitting is reverse of removal.
Before replacing the back cover, check meter reads flow by checking read-out on front display.

