

Periodic inspection and cleaning of inline filter assembly



In-line filter assembly



Remove drain plug first to allow any excess fuel to drain away



Unscrew filter element retaining cap from filter housing



Withdraw filter element carefully and remove any debris. Refitting is the reverse of removal.

